



INVENTOR[®]

Shortcut Key Guide



One Key Shortcuts

Keyboard Diagram	3
Printable Keyboard Stickers	14

Keyboard Shortcut Commands by Category

Assembly	4
Drawing Manager	4
General	4
Part	4
Placed Features	4
Sketch	5
Tools	5
View	5
Work Features	5

Multi-Character Command Aliases by Category

Annotation	6
Assembly	6
Cable & Harness	6-7
Dimension	7
Drawing Manager	8
Dynamic Simulation	8
Frame Analysis	8-9
Mold Design	9-10
Part	10
Placed Features	11
Presentation	11
Sheet Metal	11
Sketch	11-12
Sketch Features	12
Stress Analysis	12-13
Tools	13
Tube & Pipe	13
View	13

NOTE: To enable the use of multi-character command aliases in Inventor, make sure the "Use default multi-character Command Aliases" option is checked. To access this, select **Tools** tab ▶ **Options** panel ▶ **Customize**, and click the **Keyboard** tab.



- =** **EQUAL** / Constrains curves to equal radius or length.
- ;** **GROUNDING WORK POINT** / Creates a grounded work point and activates the 3D Move/Rotate tool.
- /** **WORK AXIS** / Creates a new work axis.
-]** **WORK PLANE** / Creates a new work plane.
- .** **WORK POINT** / Creates a new work point.

- DELETE** **DELETE** / Removes the selected item from the model or drawing.
- END** **ZOOM SELECTED** / Zooms in on a specifically selected item.
- ESC** **CANCEL** / Closes the active tool.
- HOME** **ZOOM ALL** / Zooms to the extents of all objects in the graphics window.
- PAGE UP** **LOOK AT** / Looks at a selected entity.

Assembly

ALT-DRAG MOUSE

MATE CONSTRAINT / Applies a mate constraint.

CTRL-H

REPLACE COMPONENT / Replaces one assembly component with another component.

SHIFT-TAB

PROMOTE / Removes a part from a subassembly and makes it an individual part in the parent assembly.

Drawing Manager

CTRL-SHIFT-N

NEW SHEET / Inserts a new drawing sheet.

CTRL-SHIFT-T

LEADER TEXT / Adds notes with leader lines to a drawing.

General

CTRL-A

SELECT ALL / Selects everything on the screen.

CTRL-C

COPY / Copies selected items.

CTRL-F

FIND / Presents the Find Part Sketches dialog box in part files; opens the Find Assembly Components dialog box in assembly files.

CTRL-N

NEW / Displays the New File dialog box.

CTRL-O

OPEN / Displays the Open dialog box, to open an existing file.

CTRL-P

PRINT / Displays the Print dialog box.

CTRL-S

SAVE / Displays the Save As dialog box.

CTRL-V

PASTE / Pastes a cut or copied item from one location to another.

CTRL-X

CUT / Cuts selected items.

CTRL-Y

REDO / Redoes previously undone commands.

CTRL-Z

UNDO / Undoes the effects of commands.

DELETE

DELETE / Removes the selected item from the model or drawing.

QUIT

EXIT / Quits the application; prompts to save documents.

SHIFT-RIGHT MOUSE CLICK

SELECT / Activates the select command menu.

Part

CTRL-SHIFT-K

CHAMFER / Activates the Chamfer tool.

CTRL-SHIFT-L

LOFT / Activates the Loft tool.

CTRL-SHIFT-M

MIRROR / Activates the Mirror tool.

Placed Features

CTRL-SHIFT-O

CIRCULAR PATTERN / Opens the Circular Pattern dialog box.

CTRL-SHIFT-R

RECTANGULAR PATTERN / Opens the Rectangular Pattern dialog box.

CTRL-SHIFT-S

SWEEP / Activates the Sweep tool.

Sketch

- =** **EQUAL** / Constrains curves to equal radius or length.
- F7** **SLICE GRAPHICS** / Slices away temporarily the portion of the model that obscures the plane.
- F8** **SHOW ALL CONSTRAINTS** / Displays all constraints.
- F9** **HIDE ALL CONSTRAINTS** / Hides All constraints.

Tools

- ALT-F8** **MACROS** / Opens the Macros dialog box.
- ALT-F11** **VISUAL BASIC EDITOR** / Launches the Microsoft Visual Basic Editor.
- ESC** **CANCEL** / Closes the active tool.
- F1** **HELP** / Opens the Inventor help files.

View

- ALT-** **USER WORK POINTS VISIBILITY** / Makes work points visible.
- ALT-]** **USER WORK PLANE VISIBILITY** / Makes work planes visible.
- ALT-/** **USER WORK AXES VISIBILITY** / Makes work axes visible.
- CTRL-** **ORIGIN POINTS VISIBILITY** / Makes the default origin points visible.
- CTRL-]** **ORIGIN PLANE VISIBILITY** / Makes the default origin planes visible.
- CTRL-/** **ORIGIN AXES VISIBILITY** / Makes the default origin axes visible.
- CTRL-0** **TOGGLE SCREEN** / Toggles screen.
- CTRL-SHIFT-E** **DEGREES OF FREEDOM** / Displays degrees of freedom.
- CTRL-SHIFT-Q** **IMATE GLYPH** / Activates the iMate Glyph tool.
- CTRL-W** **STEERING WHEELS** / Displays the Steering Wheel view tool.
- END** **ZOOM SELECTED** / Zooms in on a specifically selected item.
- F2** **PAN** / Views areas of the graphics window. (You must hold the [F2] key down.)
- F3** **ZOOM SELECTED** / Realtime zoom in and out of the graphics window. (You must hold the [F3] key down.)
- F4** **ROTATE** / Rotates objects in the graphics window.

- F5** **PREVIOUS VIEW** / Returns to the last display.
- F6** **HOME VIEW** / Rotates objects in the graphics window into an isometric orientation.
- F10** **SKETCH VISIBILITY** / Makes sketches visible.
- HOME** **ZOOM ALL** / Zooms to the extents of all objects in the graphics window.
- PAGE UP** **LOOK AT** / Looks at a selected entity.
- SHIFT-F3** **ZOOM WINDOW** / Zooms to the area you define with a window.
- SHIFT-F5** **NEXT VIEW** / Advances to the next view.
- SHIFT-MIDDLE MOUSE CLICK** **ROTATE** / Rotates a model.

Work Features

- ;** **GROUNDING WORK POINT** / Creates a grounded work point and activates the 3D Move/Rotate tool.
- /** **WORK AXIS** / Creates a new work axis.
-]** **WORK PLANE** / Creates a new work plane.
- .** **WORK POINT** / Creates a new work point.

Annotation

BA	AUTO BALLOON / Creates one or more item balloons used to identify components in drawing views.
CAT	CATERPILLAR / Adds a weld caterpillar annotation.
CB	CENTERLINE BISECTOR / Adds a centerline bisector.
CL	CENTERLINE / Adds a centerline.
CM	CENTER MARK / Adds a center mark.
DI	DATUM IDENTIFIER SYMBOL / Adds a datum identifier symbol.
EF	END FILL / Adds a weld end fill annotation in a drawing view or on a 3D weld bead to represent the hatched or filled region indicating the end of a weld bead.
F	FEATURE CONTROL FRAME / Places a feature control frame in drawing files.
FI	FEATURE IDENTIFIER SYMBOL / Adds a feature identifier symbol.
HTF	HOLE TABLE-FEATURES / Selects feature set (all punch center instances from a single feature).
HTS	HOLE TABLE-SELECTION / Selects recovered punch centers individually.
HTV	HOLE TABLE-VIEW / Adds a hole table to a view.
LE	LEADER TEXT / Adds notes with leader lines to a drawing.
PL	PARTS LIST / Creates a parts list.
RT	REVISION TAG / Adds revision tags to a drawing.

RTB	REVISION TABLE / Creates a revision table.
ST	SURFACE TEXTURE SYMBOL / Adds a surface texture symbol.
SY	SYMBOLS / Adds sketched symbols to a drawing sheet.
T	TEXT / Activates the text tool in a drawing file.
TB	TABLE / Creates a table.
WS	WELDING SYMBOL / Provides annotation and acts as a grouping mechanism by referencing multiple beads with a single welding symbol.

PC	PATTERN COMPONENT / Selects one or more components to include in the pattern.
RA	REPLACE ALL / Replaces all occurrences of the component in the current assembly.
V	MOVE COMPONENT / Activates the Move Component command.

Cable & Harness

AR	AUTOMATIC ROUTE / Automatically routes one or more selected wires into segments based on the shortest path through the network and the segment opening that is closest to the wire start and endpoints.
BR	CHECK BEND RADIUS / Checks for bends that do not meet the specified minimum bend radius on segments, and routed and unrouted wires and cables in the active harness assembly.
BS	BROKEN SKETCH ENTITY / Sets the start point and endpoint for the length to remove from the cable, wire, or segment.
CA	CONNECTOR AUTHORIZING / Adds Cable and Harness-specific data to complete the definition of connectors for use in Cable and Harness.
CC	CREATE CABLE / Creates a cable containing multiple wires that are connected or terminated to selected pins within a harness assembly.

Assembly

C	CONSTRAINTS / Adds an assembly constraint.
CO	COPY COMPONENTS / Creates a copy of the component.
G	ROTATE COMPONENT / Activates the Rotate tool.
IA	ANALYZE INTERFERENCE / Analyzes assemblies for interference.
MI	MIRROR COMPONENTS / Creates a mirror component.
N	CREATE COMPONENT / Displays the Create In-Place Component dialog box.
P	PLACE COMPONENT / Places a component in the current assembly.

Cable & Harness

CF	CREATE FOLD / Creates fold.	L	CABLE & HARNESS LIBRARY / Adds new library definitions, and modifies, copies, and deletes existing library definitions for harness objects such as wires, cables, raw ribbon cables, and virtual parts.
CR	CREATE RIBBON CABLE / Creates a ribbon cable between a start and end connector.	NB	NAILBOARD / Specifies the harness assembly and setup to create or edit a nailboard view.
CS	CREATE SEGMENT / Creates a harness segment.	P	PIVOT / Fixes segment points so you can drag the selected segment relative to that fixed point.*
CV	PLACE CONNECTOR VIEWS / Places connector views.	P	PLACE PIN / Places a pin.*
CW	CREATE WIRE / Creates a wire between selected pins within a harness assembly.	PD	PROPERTY DISPLAY / Displays properties for the selected objects.
E	EDIT / Edits nailboard sketch.	PG	PLACE PIN GROUP / Automatically places multiple pins with the specified naming, configuration, and orientation on a part.
EH	EXPORT HARNESS DATA / Exports harness data.	RG	REPORT / Process reports for the active harness assembly.
F	FAN IN / Collapses wire stubs on top of one another to reduce the detail or clutter in nailboard documentation.	RH	REVIEW HARNESS DATA / Reviews harness data.
FO	FAN OUT / Equally distributes wire stubs about the endpoint of a segment using the specified angle and sorting direction.	RT	ROUTE / Routes cables and wires manually.
HA	CREATE HARNESS / Adds the harness subassembly to an assembly file with the specified name and location, and displays the Cable and Harness tab.	RW	RECONNECT WIRE PINS / Reconnects wire pins.
HD	HARNESS DIMENSION / Adds a driven, aligned dimension between 2 points.	SP	CREATE SPLICE / Creates a splice.
HP	HARNESS PROPERTIES / Custom properties of harness components.	TB	TABLE / Creates a table.
IH	IMPORT HARNESS DATA / Imports harness data.	U	UNROUTE / Unroutes selected wires from selected segments.
		V	ASSIGN VIRTUAL PARTS / Assigns virtual parts.

Dimension

BD	BASELINE DIMENSION / Adds baseline dimensions.
BN	BEND NOTES / Creates or edits a bend note.
CN	CHAMFER NOTE / Adds a chamfer note to a drawing view.
D	GENERAL DIMENSION / Adds a dimension to a sketch or drawing.
HN	HOLE/THREAD NOTES / Adds a hole or thread note with a leader line.
O	ORDINATE DIMENSION SET / Activates the Ordinate Dimension Set command.
OD	ORDINATE DIMENSION / Adds an ordinate dimension.
PN	PUNCH NOTES / Creates a punch note.

*NOTE: The same alias can perform different commands depending on the design environment and object you are working on.

Drawing Manager

AV	AUXILIARY VIEW / Places an auxiliary view by projecting from an edge or line in a parent view.
B	BALLOON, BOM / Activates the Balloon tool or displays the BOM Properties dialog box, depending on the work environment.
BV	BASE VIEW / Creates a base view.
BRV	BREAK / Creates a broken, foreshortened view.
BO	BREAK OUT / Removes a defined area of material to expose obscured parts or features in an existing drawing view.
CR	CROP / Use to set boundary type and visibility of crop cut lines for crop operations.
DV	DETAIL VIEW / Provides circular and rectangular shapes of detail profile.
PV	PROJECTED VIEW / Creates a projected view.
RD	RETRIEVE DIMENSIONS / Retrieves model dimensions in a drawing.
SV	SECTION VIEW / Creates a section view.

Dynamic Simulation

AVI	PUBLISH MOVIE / Creates AVI animation.
CC	CONVERT ASSEMBLY CONSTRAINTS / Converts assembly constraints.
CSA	PUBLISH TO STUDIO / Creates studio animation.
DM	DYNAMIC MOTION / Dynamic part motion.
F	FORCE / Applies force on the selected objects.
FEA	EXPORT TO FEA / Exports to FEA.
J	INSERT JOINT / Inserts joint.
MS	MECHANISM STATUS AND REDUNDANCIES / Provides model status information and guides you through the process of repairing redundant constraints.
OG	OUTPUT GRAPHER / Displays graphs and numerical values of all the input and output variables in a simulation during and after the simulation completes.
RF	REFERENCE FRAME / Creates a Reference Frame from the input provided.
SET	DYNAMIC SIMULATION SETTINGS / Sets options that apply to the entire Dynamic Simulation session.
TO	TORQUE / Applies torque on the selected objects.
TR	TRACE / Creates the absolute or relative kinematic values (trajectory, velocity, and acceleration) of one or more points placed anywhere on a component.
UF	UNKNOWN FORCE / Calculates the required force, torque, or jack to keep a mechanism in static equilibrium for a given position

Frame Analysis

A	ANIMATE RESULTS / Animates the selected simulation results.
AM	AXIAL MOMENT / Adds an axial moment.
B	PROBE / Displays the simulation results for a specific point on the model.
BC	BOUNDARY CONDITIONS / Toggles display of all boundary conditions.
BD	BEAM DETAIL / Displays detailed results (diagrams, tables) for the selected beams of a structure.
BM	BENDING MOMENT / Applies the bending moment to the selected beam.
C	CREATE SIMULATION / Creates a simulation.
CB	COLOR BAR / Edits color bar.
CL	CONTINUOUS LOAD / Applies and distributes uniform load along the beam you select.
D	DIAGRAM / Adds custom user diagram.
EX	EXPORT / Exports to robot structural analysis.
F	FORCE / Applies a force of the specified magnitude to the selected faces, edges, or vertices.
FL	FLOATING PINNED CONSTRAINT / Adds floating pinned constraint.
LB	BEAM LABELS / Toggles display of beam labels.

Frame Analysis

LN	NODE LABELS / Toggles display of node labels.
LP	PROBE LABELS / Toggles visibility of probe labels.
LS	LOCAL SYSTEMS / Toggles display of beam local systems.
LV	LOAD VALUES / Toggles display of load values.
MA	BEAM MATERIALS / Enables you to change the material of the beam.
MO	MOMENT / Applies the general moment to the selected beam.
N	NO SHADING / Turns off the Shaded Results display.
P	BEAM PROPERTIES / Provides physical and engineering properties of a frame member, and enables you to customize the data.
PN	PINNED CONSTRAINT / Applies pinned constraint when no displacement and free rotation is allowed on beam or node.
R	REPORT / Generates a report.
RE	RELEASE / Assigns a release of specified degrees of freedom to a selected beam in a structure.
RL	RIGID LINK / Enables you to define a rigid link between selected nodes in a frame structure.
S	SIMULATE / Runs a simulation.
X	FIXED CONSTRAINT / Applies a fixed constraint on selected faces, edges, or vertices.

Mold Design

2D	2D DRAWING / Creates one or more drawing documents.	CH	CREATE HEEL / Creates one or more heels on an insert.*
AM	ANIMATE RESULTS / Animates the selected simulation results.	CI	CREATE INSERT / Creates an insert.
AO	ADJUST ORIENTATION / Prompts the Adjust Orientation dialog box.	CM	COMBINE CORES AND CAVITIES / Creates, edits, or deletes a combined core or cavity.
AP	ADJUST POSITION / Prompts the Adjust Position dialog box.	CP	PLACE CORE PIN / Places a core pin into a mold.
AR	AUTO RUNNER SKETCH / Creates an auto runner sketch.	CS	COOLING COMPONENT / Specifies the components that conduct the coolant through the cooling channels.
AU	MOLD BASE AUTHOR / Assigns component attributes before inserting a user defined mold base.	CW	COLD WELL / Defines the cold wells that are at the end of the sprue or on a runner.
BC	BRIDGE CURVE / Connects curves by G2 continuity.	DW	DEFINE WORKPIECE SETTING / Enables you to generate a rectangular or cylindrical workpiece, which is the precondition for generating the core and cavity.
BL	MOLD BOOLEAN / Integrates the interference checking function and the Boolean calculation.	EJ	EJECTOR / Creates an ejector pin to eject a plastic part.
BR	BOUNDED RUNOFF SURFACE / Creates a runoff surface.	EM	EDIT MOLDABLE PART / Edits a moldable part.
CC	COOLING CHANNEL CHECK / Checks cooling channels for safety, interference, and distance between cooling system segments.*	ES	USE EXISTING SURFACE / Creates, edits, or deletes the existing patching or runoff surface.
CC	PLACE CORE AND CAVITY / Places or deletes imported core and cavity.*		
CD	CORE/CAVITY / Core/Cavity design and analysis environment.		
CH	COOLING CHANNEL / Creates a cooling channel.*		

*NOTE: The same alias can perform different commands depending on the design environment and object you are working on.

Mold Design

ET	EXTEND RUNOFF SURFACE / Extends runoff surface.	PH	CREATE PLANAR PITCH / Creates planar pitch.	SM	SELECT MATERIAL / Selects material.
F	FINISH CORE/CAVITY / Activates core and cavity environment.	PI	PLACE INSERT / Places a previously generated insert in the mold assembly.	SP	SECONDARY SPRUE / Provides the means to add a new secondary sprue to the mold design and to edit, delete, and adjust the dimensions of the secondary sprue.
GC	GENERATE CORE AND CAVITY / Creates the required files for the core and cavity.	PP	PLASTIC PART / Places one or more parts into a Mold Design project.	UM	USER MOLD BASE / Places a user-defined mold base.
GP	GATE LOCATION / Sets gate locations.	PR	SET PLOT PROPERTY / Sets plot property.	WP	WORKPIECE POCKET / Creates pockets for a rectangular workpiece.
GT	GATE / Adds a gate.	PS	CREATE PATCHING SURFACE / Creates patching surface.*		
JM	JOB MANAGER / Monitors the progress of analyses and, if necessary, stops an analysis.	PS	MOLD PROCESS SETTINGS / Opens mold process settings.*		
LA	LIFTER / Places a lifter assembly into the mold so the mold can open and close smoothly.	PT	PATTERN / Duplicates one plastic part and arranges the resulting occurrences in a rectangular, circular, or variable pattern.		
LR	LOCATING RING / Creates a locating ring.	RN	RUNNER / Creates a runner.		
MB	MOLD BASE / Provides the tools to create a mold base.	RR	RADIATE RUNOFF SURFACE / Creates, edits, or deletes a radiated runoff surface.		
MF	MOLD FILL ANALYSIS / Predicts the thermoplastic polymer flow inside the mold during the filling phase.	RS	CREATE RUNOFF SURFACE / Creates a runoff surface.		
MP	PART PROCESS SETTINGS / Determines the optimum mold temperature, melt temperature, and injection time based on the selected material and part geometry.	SA	SLIDER / Creates a standard slider.		
MS	MANUAL SKETCH / Activates the sketch environment of a part where you can draw an insert sketch.	SB	SPRUE BUSHING / Creates a custom or vendor sprue bushing.		
NM	CREATE MOLD DESIGN / Creates mold design.	SK	MOLD SHRINKAGE / Estimates the percentage of shrinkage that occurs based on the mold dimensions.*		
PF	PART FILL ANALYSIS / Reveals information about the flow of polymer through parts.	SK	PART SHRINKAGE / Estimates the percentage of shrinkage on an individual part.*		
		SL	LOCK SET / Creates a side lock or an interlock.		

Part

- 1 **TOGGLE SMOOTH** / Activates the toggle smooth command.
- E **EDIT FORM** / Edits an existing form to add, remove, or modify controls.

*NOTE: The same alias can perform different commands depending on the design environment and object you are working on.

Placed Features

CH	CHAMFER / Creates a chamfer.
DE	DIRECT EDIT / Allows you to make quick edits to existing solids.
EF	END FILL / Adds a weld end fill annotation in a drawing view or on a 3D weld bead to represent the hatched or filled region indicating the end of a weld bead.
F	FILLET / Creates a fillet in part and assembly files.
GW	GROOVE WELD / Creates a groove weld feature in a weldment assembly that connects two face sets with a solid weld bead.
MI	MIRROR / Creates a mirror feature.
Q	CREATE IMATE / Displays the Create iMate dialog box, for developing iMates.
RP	RECTANGULAR PATTERN / Creates rectangular pattern of feature.
S	2D SKETCH / Activates the 2D Sketch command.
S3	NEW SKETCH / Activates the 3D Sketch command.
SH	SHELL / Removes material from a part interior, creating a hollow cavity with walls of a specified thickness.
TH	THREAD / Creates threads in holes or on shafts, studs, or bolts.
W	FILLET / Activates the Fillet tool.
WS	WELDING SYMBOL / Provides annotation and acts as a grouping mechanism by referencing multiple beads with a single welding symbol.

Presentation

CV	CREATE VIEW / Adds a new presentation view.
T	TWEAK COMPONENTS / Tweaks components in a presentation.

Sheet Metal

BE	BEND / Creates a bend.
CC	CORNER CHAMFER / Activates the corner chamfer command.
CF	CONTOUR FLANGE / Creates a contour flange.
CR	CORNER ROUND / Adds fillets or rounds to one or more corners of a sheet metal part.
CS	CORNER SEAM / Defines the corner seams you add to sheet metal faces.
FA	FACE / Creates a sheet metal face.
FO	FOLD / Defines the fold in a sheet metal face along a sketched line that terminates at face edges.
HEM	HEM / Creates a folded hem along sheet metal edges.
PT	PUNCHTOOL / Defines the punch of a 3D shape into a sheet metal face.
ST	SHEET METAL DEFAULTS / Changes the options and parameters for the active sheet metal part from those options defined by the selected Sheet Metal Rule.

Sketch

A	BASELINE SET, ANIMATE, ARC / Activates the Baseline Set, Animate, or Arc tool, depending on the work environment.
A3	THREE POINT ARC / Draws a three-point arc using dynamic input.
AD	AUTO DIMENSION / Prompts the Auto Dimension dialog box.
BE	BEND / Creates a bend.
CE	CENTER POINT CIRCLE / Draws a center point circle using dynamic input.
CH	CHAMFER / Creates a chamfer.
CP	CIRCULAR PATTERN / Creates circular pattern of sketch geometry.
EL	ELLIPSE / Creates an ellipse with a center point, a major axis, and a minor axis that you define.
EX	EXTEND / Makes surfaces larger in one or more directions.
FI	FILLET / Adds fillets or rounds to one or more edges of a part, between two face sets, or between three adjacent face sets.
H	FILL/HATCH SKETCH REGION / Hatches or color fills an enclosed boundary in a drawing sketch.
I	VERTICAL / Activates the vertical constraint tool.
L	LINE / Creates a line or arc.
MI	MIRROR / Mirrors sketch geometry about a selected plane.

Sketch

MO	MOVE / Moves selected sketch geometry from point to point, or move a copy of the geometry.
O	OFFSET / Duplicates selected sketch geometry, and positions it an offset distance from the original.
PO	POINT, CENTER POINT / Sketches points and center points.
POL	POLYGON / Creates polygon shapes.
REC	TWO POINT RECTANGLE / Draws a two-point rectangle using dynamic input.
REC3	THREE POINT RECTANGLE / Draws a three-point rectangle using dynamic input.
RO	ROTATE COMPONENT / Activates the Rotate Component command.
RP	RECTANGULAR PATTERN / Creates rectangular pattern of sketch geometry.
SP	SPLINE / Creates a spline.
TC	TANGENT CIRCLE / Creates circle tangent to three lines.
X	TRIM / Activates the Trim command.

Sketch Features

BP	BEND PART / Bends a portion of a part.
E	EXTRUDE / Extrudes a profile.
H	HOLE / Creates a hole in a feature.
LO	LOFT / Creates lofted features or bodies by blending multiple profiles into smooth shapes between the profiles or part faces.
R	REVOLVE / Revolves a sketch.
SW	SWEEP / Creates a sweep feature.

Stress Analysis

A	ANIMATE RESULTS / Animates the selected simulation results.
AC	AUTOMATIC CONTACTS / Compares automatic contacts.
BC	BOUNDARY CONDITIONS / Toggles display of all boundary conditions.
BE	BEARING LOAD / Applies a bearing load to a full or partial cylindrical surface.
BO	BODY LOAD / Defines angular velocity or angular or linear acceleration for the model.
CC	COLOR BAR / Displays the Color Bar settings dialog box where you adjust the color bar display parameters.
CF	FIXED CONSTRAINT / Applies a fixed constraint on selected faces, edges, or vertices.

CP	CONVERGENCE PLOT / Displays the plot within a dialog box.*
CP	PIN CONSTRAINT / Sets the pinned constraint origin and offset.*
CS	FRICTIONLESS CONSTRAINT / Applies a frictionless constraint on selected faces.
CT	CONTOUR SHADING / Displays color changes using a strict banding between colors.
FO	FORCE LOAD / Applies a force of the specified magnitude to the selected faces, edges, or vertices.
GR	GRAVITY LOAD / Creates a gravity load.
MAT	ASSIGN MATERIALS / Opens the assign materials dialogue box to assign materials to a component.
MAX	MAXIMUM RESULT / Turns on and off the display of the point of maximum result in the mode.
MC	MANUAL CONTACT / Adds manual contact conditions to selected geometry elements.
MIN	MINIMUM RESULT / Turns on and off the display of the point of minimum result in the model.
ML	LOCAL MESH CONTROL / Adds a local mesh control.
MO	MOMENT LOAD / Applies a load of the specified magnitude around the axis and perpendicular to the face.
MS	MESH SETTINGS / Specifies the mesh sizing and coarseness.

*NOTE: The same alias can perform different commands depending on the design environment and object you are working on.

Stress Analysis

MV	MESH VIEW / Displays the element mesh used in the solution with the result contours. Also displays the mesh over the undeformed model.
N	CREATE SIMULATION / Creates new simulation.
NP	NO SHADING / Turns off the Shaded Results display.
P	PROBE / Activates the Probe command. You place probes as needed in areas of interest to display the stress values for that point.
PL	PROBE LABELS / Toggles the visibility of probe labels.
PR	PRESSURE LOAD / Pressure load.
R	REPORT / Generates a report.
RF	REMOTE FORCE LOAD / Applies a force of the specified magnitude to the selected face.
S	SIMULATE / Runs a simulation.
SC	RESULT DISPLACEMENT SCALE / Adjusts displacement scale.
SET	STRESS ANALYSIS SETTINGS / Activates the stress analysis settings dialog box.
SM	SMOOTH SHADING / Displays color changes using a blended transition.
SS	SAME SCALE / Maintains the same scale while viewing different results.
T	PARAMETRIC TABLE / Accesses the parametric table to specify design constraints and parameter ranges.

Tools

LA	EDIT LAYERS / Specifies a layer name and attributes for common display properties of drawing objects.
M	MEASURE DISTANCE / Opens the Measure Distance window.
OP	APPLICATION OPTIONS / Opens the Application Options settings.
SE	EDIT STYLES / Style and Standard Editor.

Tube & Pipe


AT	TUBE & PIPE AUTHORIZING / Authors an iPart or a normal part for publishing to the Content Center Library.
CF	CONNECT FITTINGS / Connects existing fittings.
DR	DERIVED MOTION / Creates or edits a derived route.
ES	EDIT BASE SKETCH / Edits the base 3D sketch.
HL	HOSE LENGTH / Edits hose length by changing end tangency weights.
IG	INCLUDE GEOMETRY / Introduces reference geometry to the route sketch.
IN	INSERT NODE / Inserts route node into segment.
IO	ISOGEN OUTPUT / Saves a file with a specified name and ISOGEN file type.

MN	MOVE NODE / Drags node to a new location.
MS	MOVE SEGMENT / Drags segment to a new location.
NR	NEW ROUTE / Adds new rigid piping and bent tubing routes to a pipe run.
PF	PLACE FITTING / Picks up a fitting from your project work space to place into the active run.
PR	CREATE PIPE RUN / Creates pipe run.*
PR	POPULATE ROUTE / Populates route.*
RT	ROUTE / Starts or continues route definition.
ST	TUBE AND PIPE STYLES / Copies and modifies existing style definitions and delete styles you no longer use.
WT	GROUNDING WORK POINT / Grounded Work Point.

View

ORBIT	FREE ORBIT / Rotates a model about the center of the screen or about axes in model space.
PAN	PAN / Pans the view.
VC	VIEWCUBE / Toggles the view of the ViewCube.
Z	ZOOM WINDOW / Zooms in on a specified area.

*NOTE: The same alias can perform different commands depending on the design environment and object you are working on.

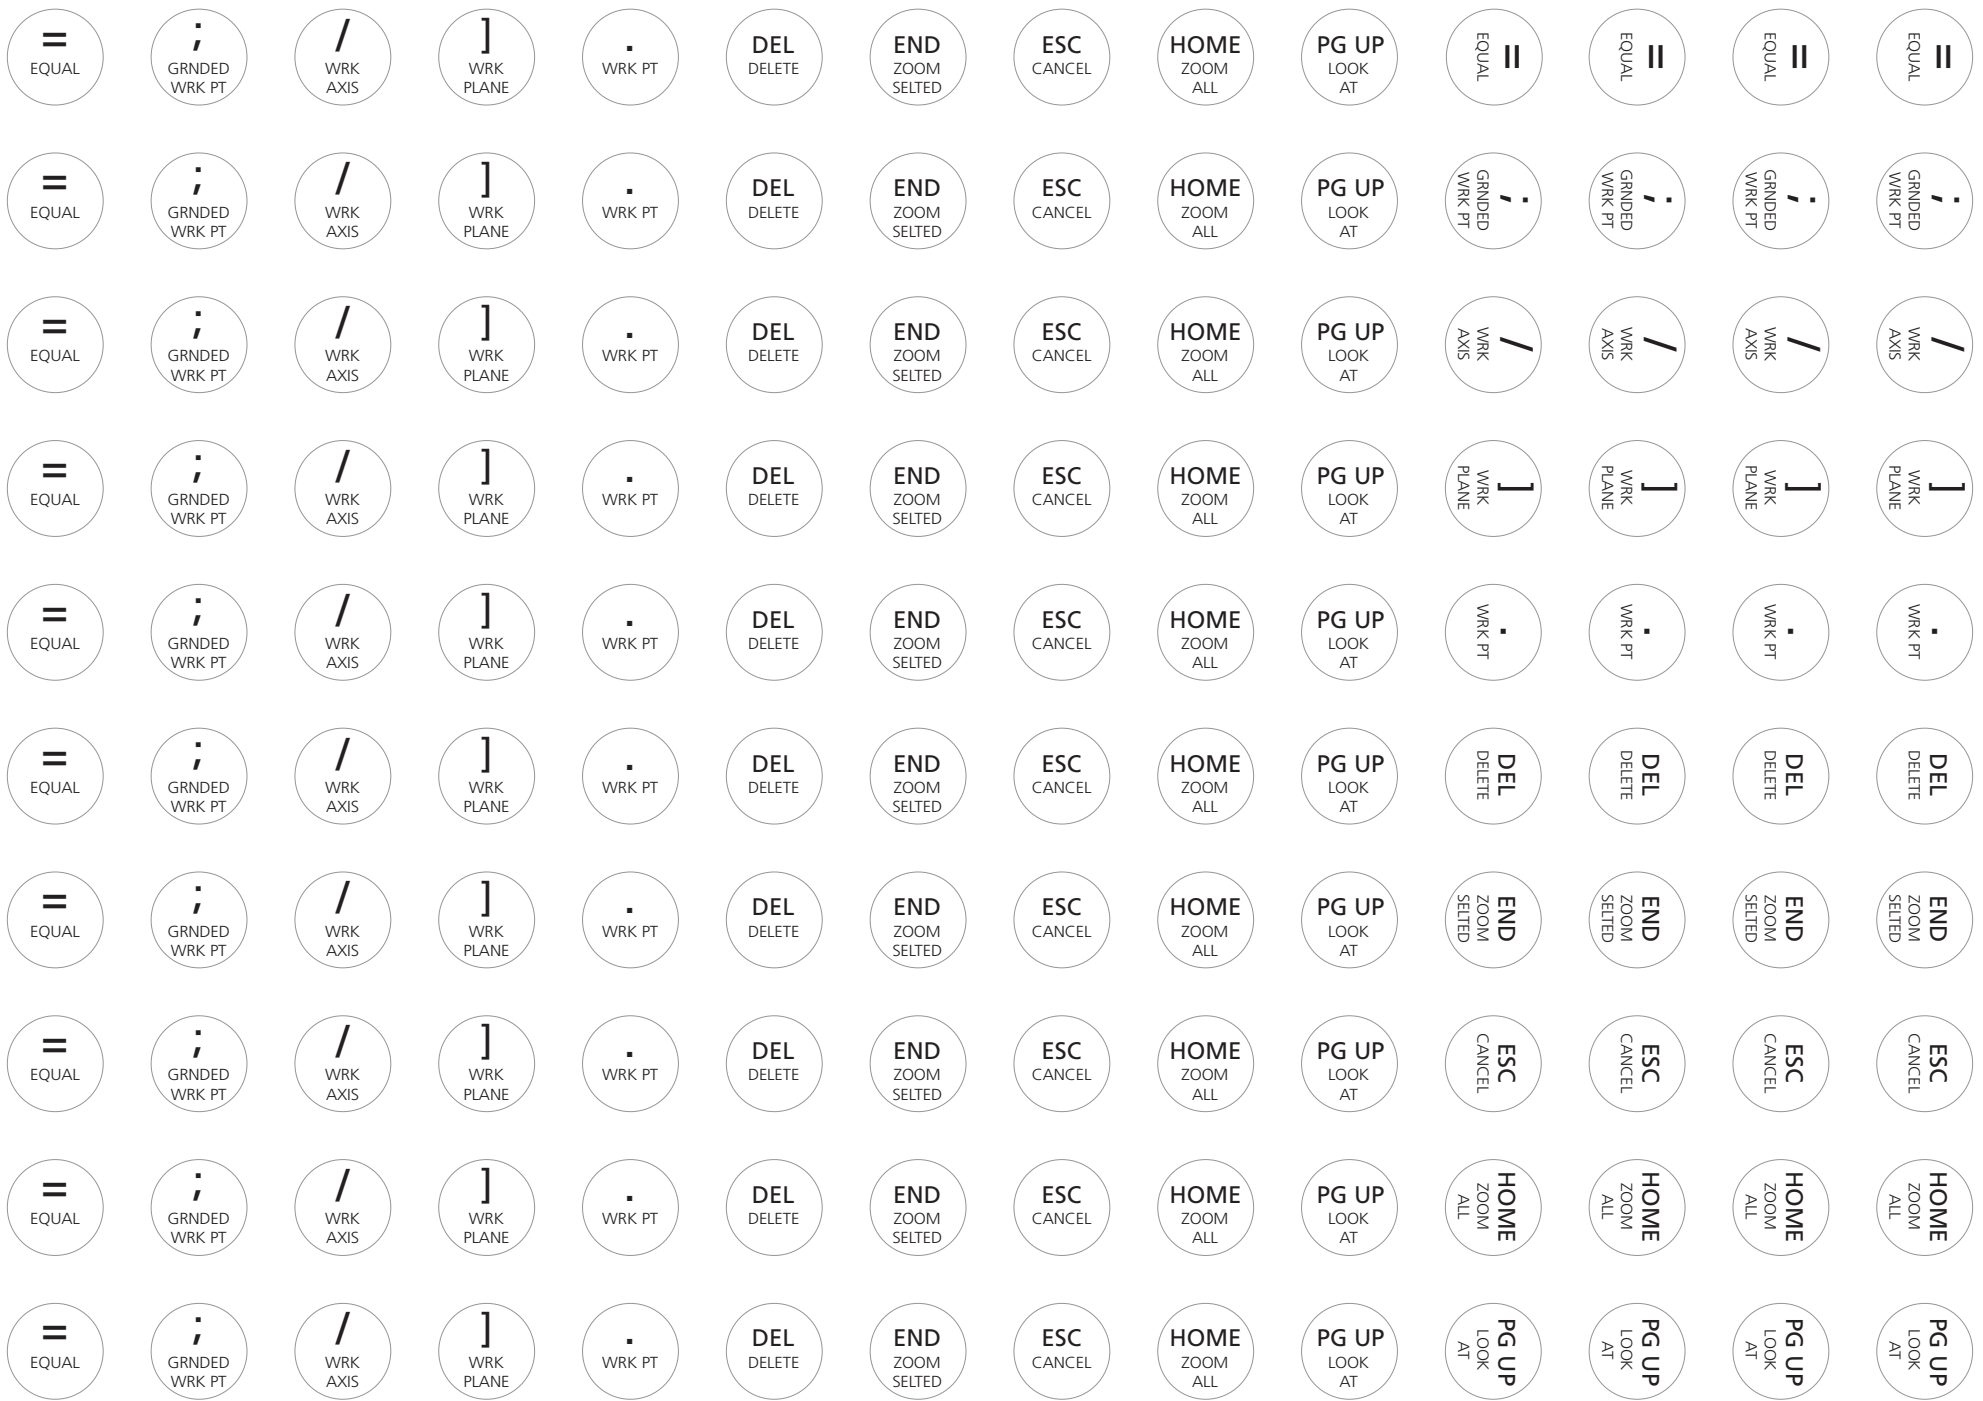

PRINTABLE KEYBOARD STICKERS [14 COMPLETE SETS]
FOR USE WITH: <http://www.onlinelabels.com/OL32.htm>